




Gateway KAV60 LT2016U Webcam Replacement

This guide will take you through the steps for replacing the webcam.

Written By: Brian

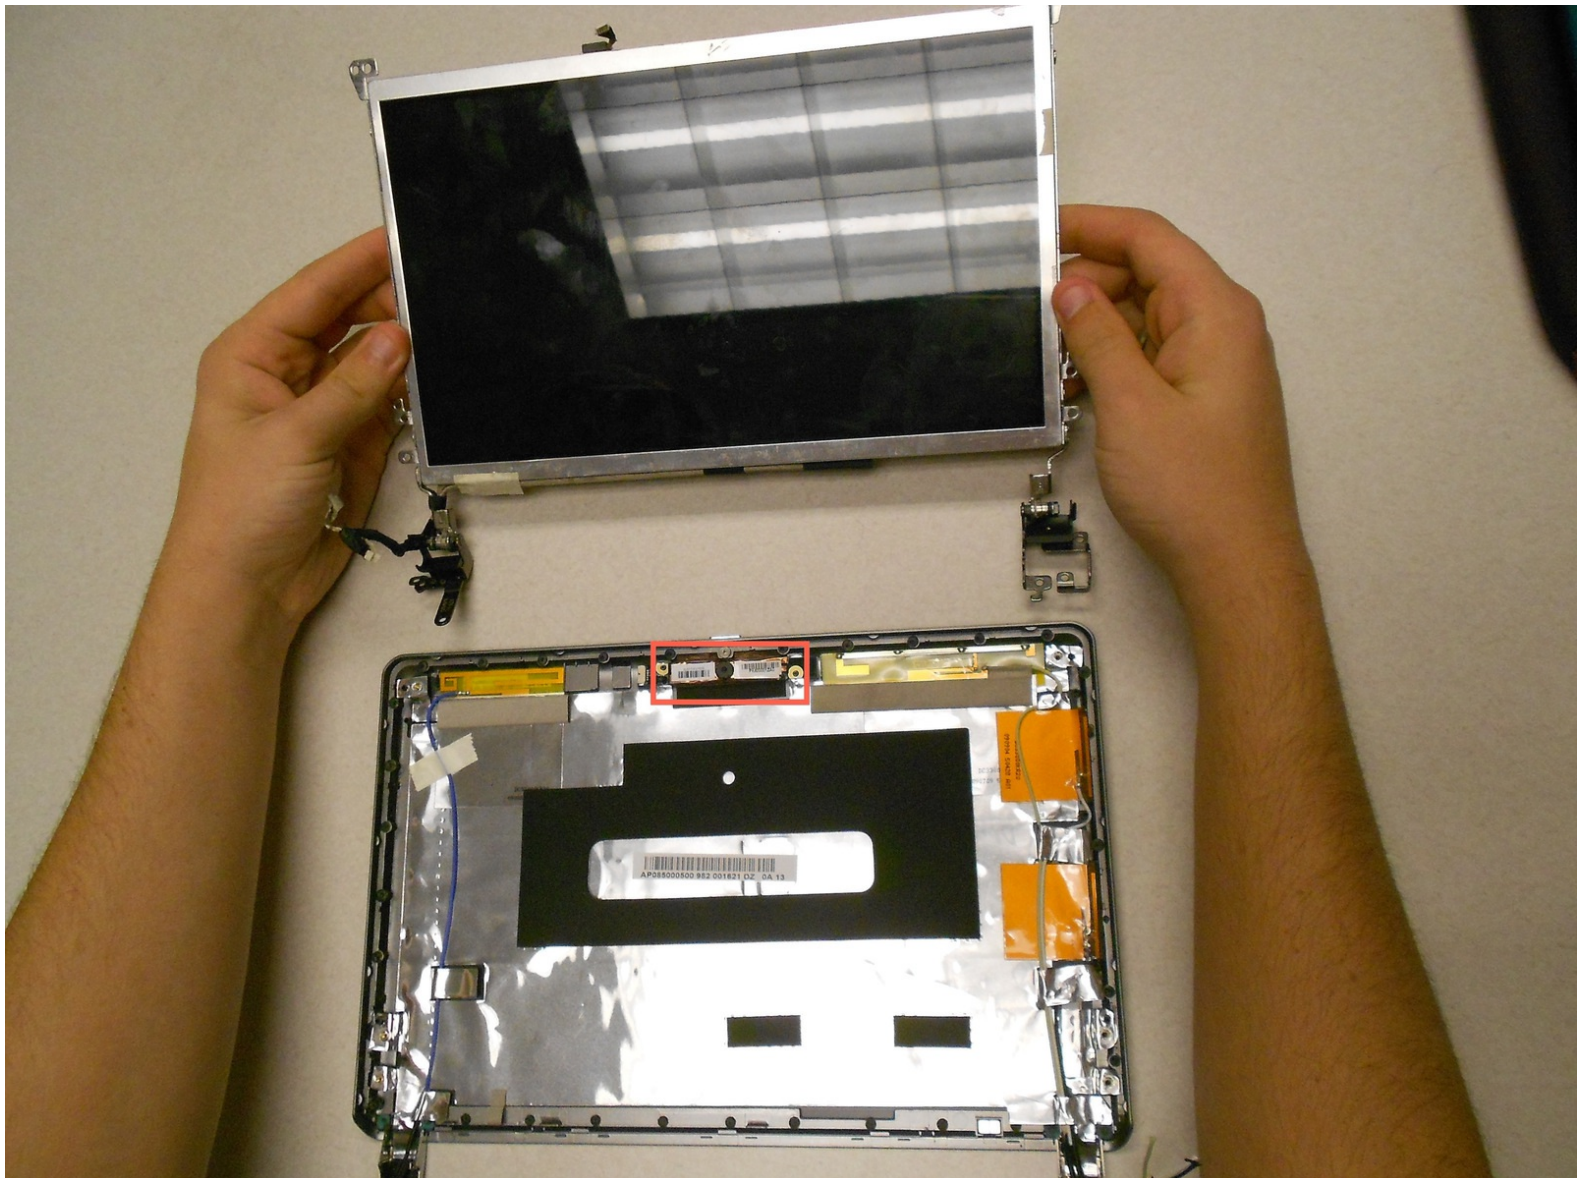

INTRODUCTION

It is important to have a functioning webcam because it is a useful accessory to have when it comes to tasks like video calls, taking pictures/videos, and so on.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- Unlock the button in the top left on the back of the laptop (So the red is showing).

Step 2




- The battery should be able to be removed easily now.

Step 3 — Upper Cover

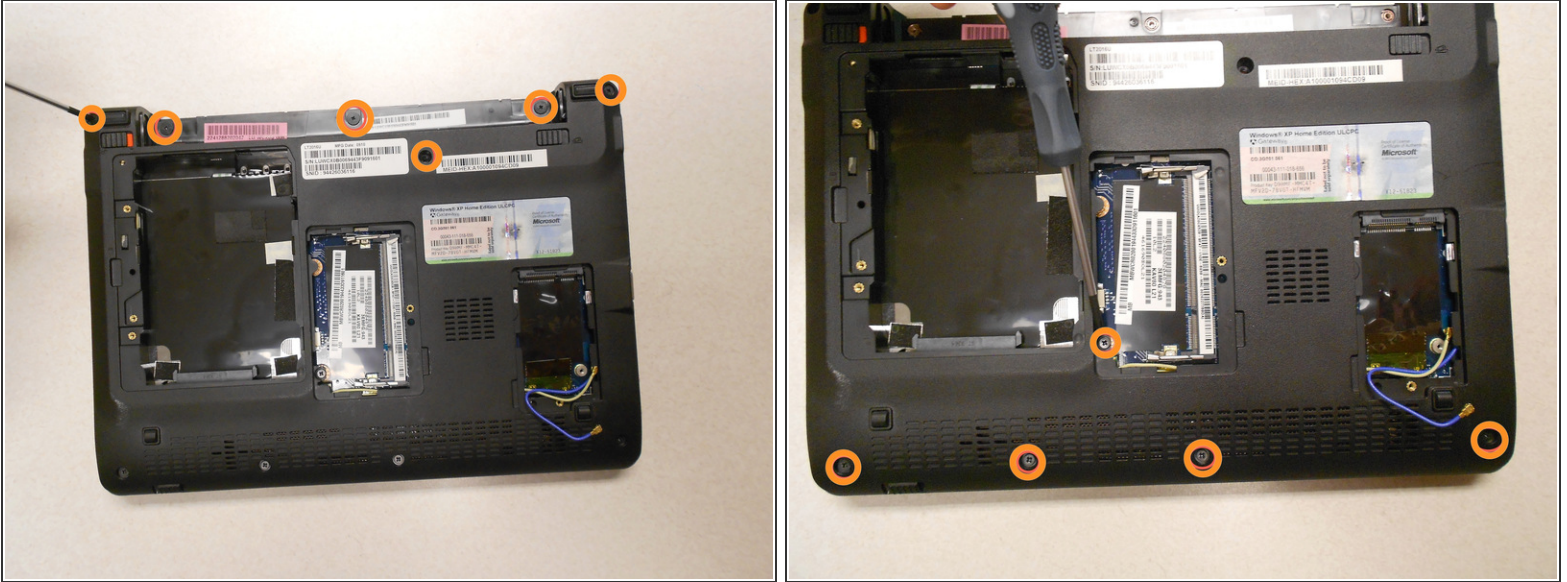

- Using the Phillips #0 screwdriver, remove six (6) 5mm screws, two (2) 17.5mm screws, and three (3) 2.5mm screws from the back cover, as marked here.

Step 4

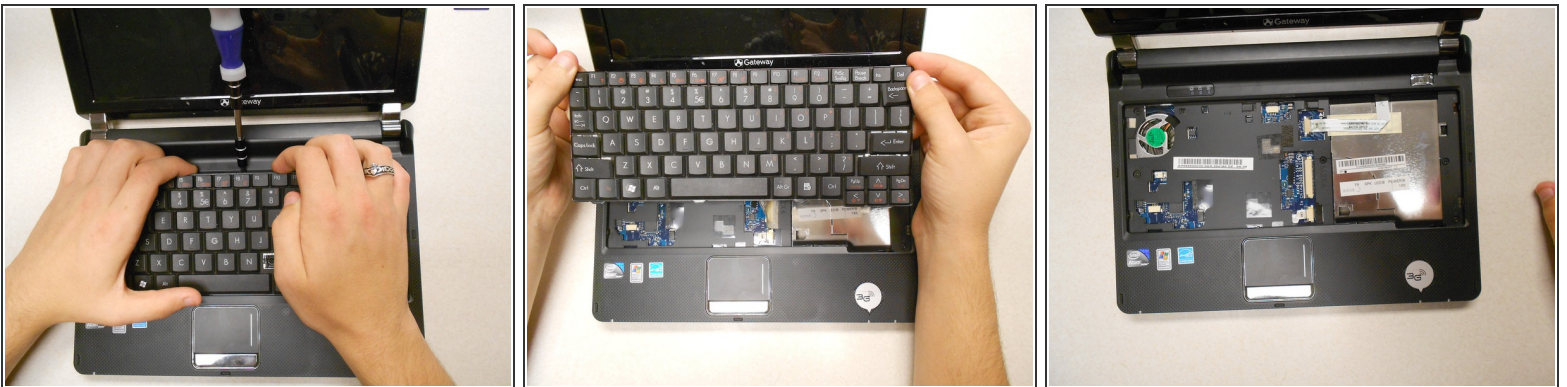



- Pry off the keyboard by placing your plastic opening tool on the center of the top row of keys, as shown in the photograph.
- If the plastic opening tool bends or slips, use something sturdier, such as the Phillips #0 screwdriver.
- Remove the keyboard.

Step 5




- Remove the five (5) 5mm screws shown here using the Phillips #0 screwdriver.

Step 6

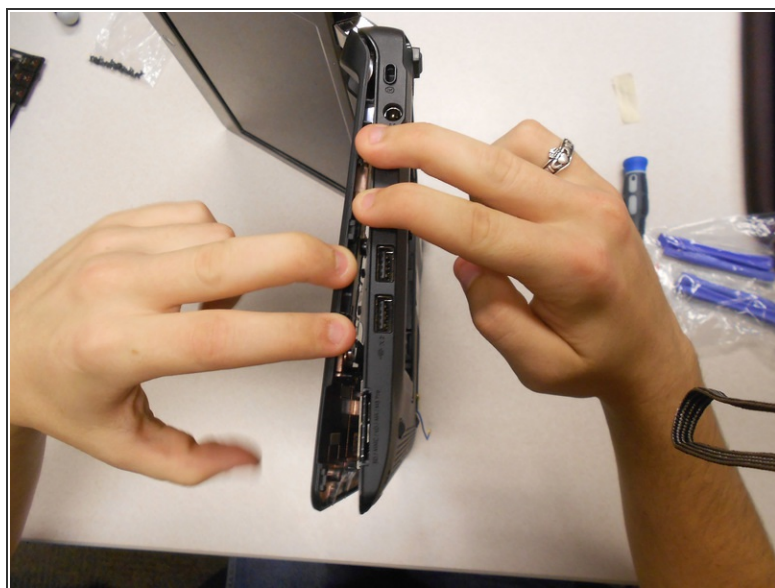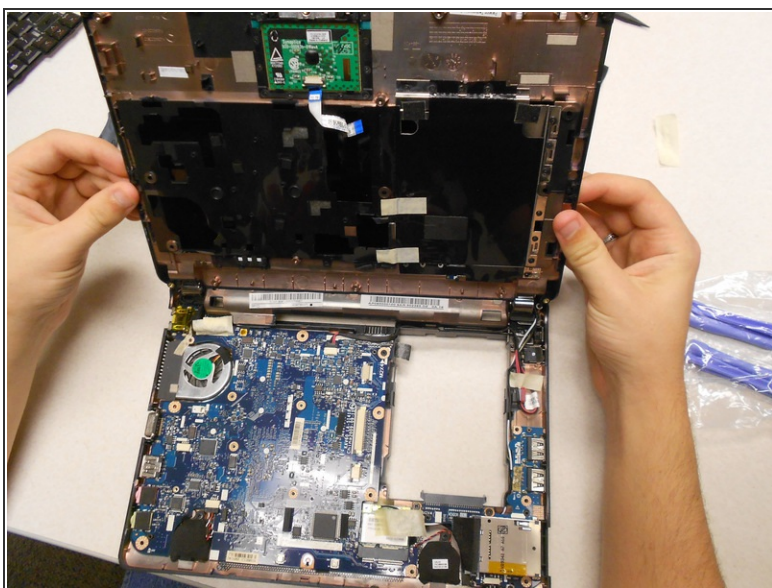


- Separate the upper cover from the back cover. It is possible to do this without a tool, but you may also use a plastic opening tool for added leverage.
- Be careful to keep even pressure all the way around the cover so that it is not bent beyond repair.

Step 7 — LCD

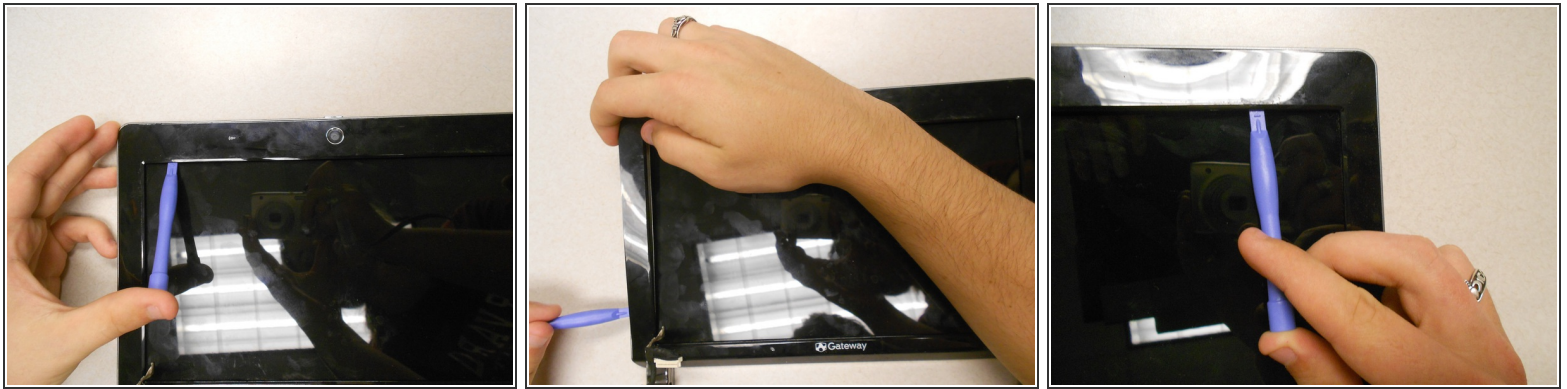


- Pry the border around the monitor off of the top cover using a plastic opening tool, as shown.
- Be careful not to damage the computer screen in the process.

Step 8

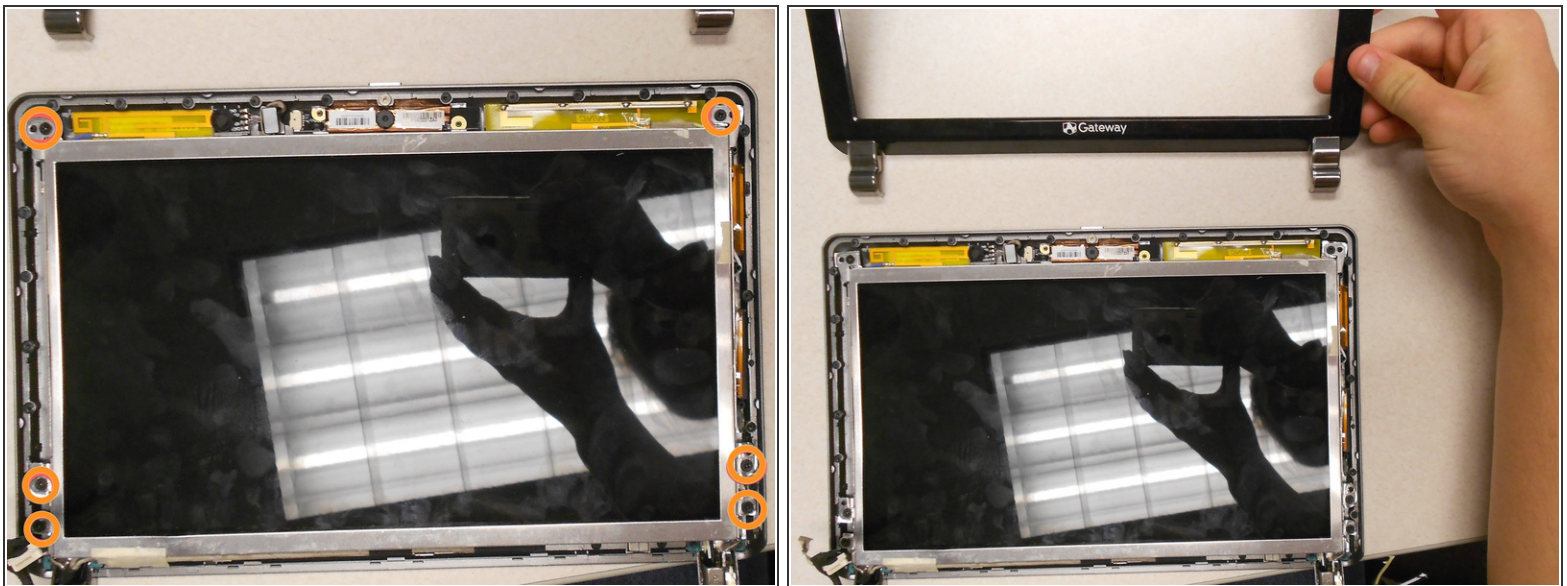



- Separate the monitor from the border cover once all snap connections have been pried apart.

Step 9

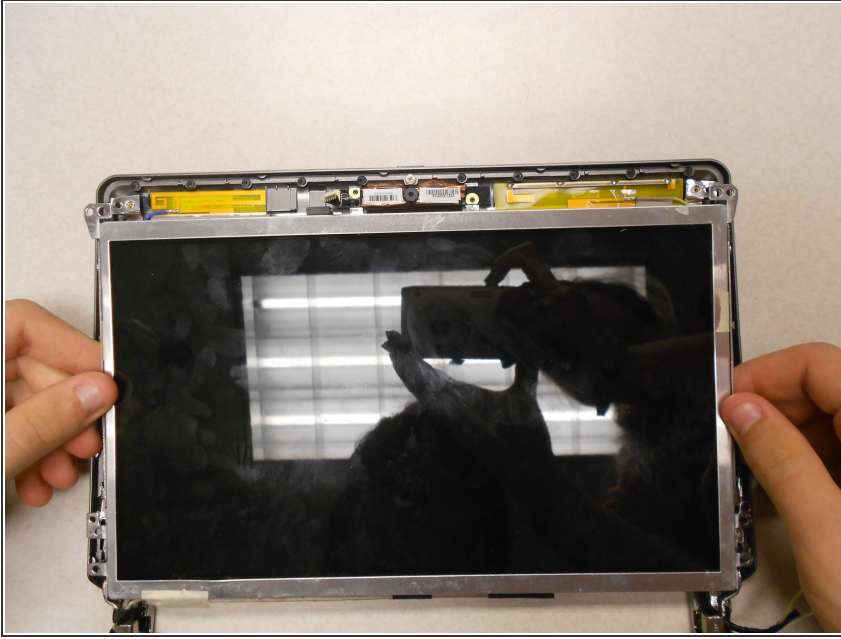


- Remove the six (6) 5mm screws shown here using the Phillips #0 screwdriver.

Step 10

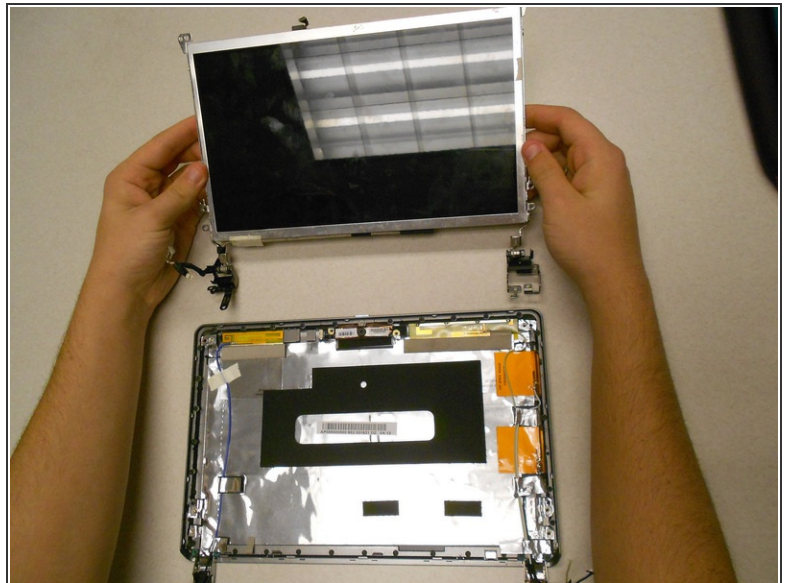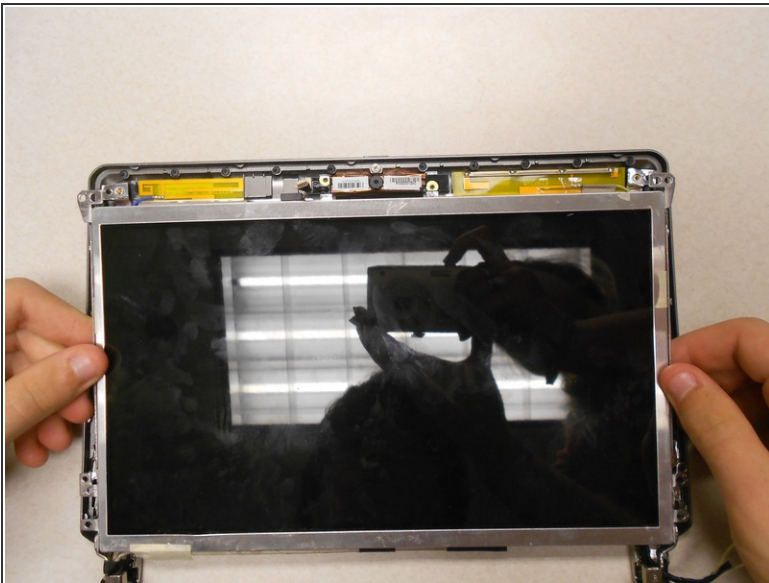

- Take the screen out of the top cover.

Step 11 — Webcam

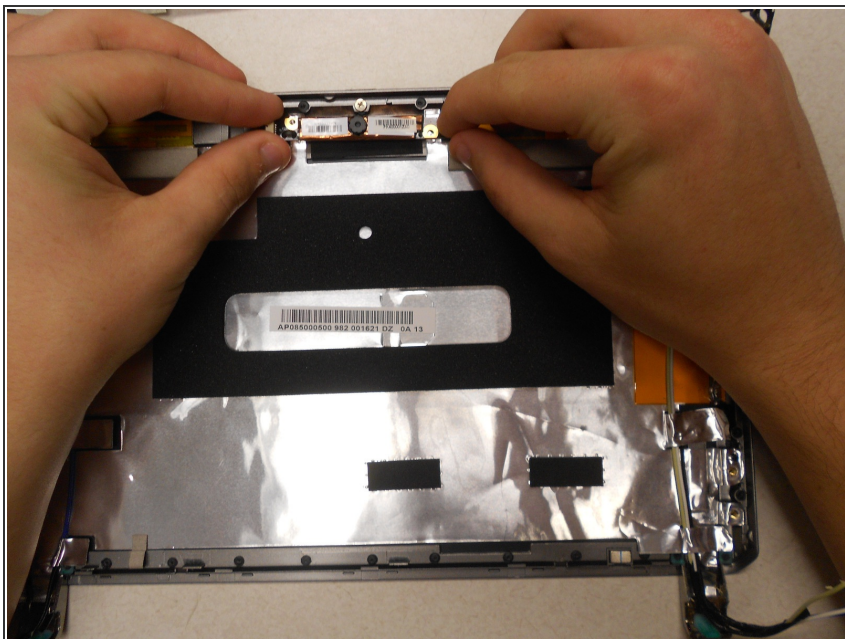

- Take the screen out of the top cover.
- Disconnect the webcam from the wires attaching it to the computer.
- Lift the webcam away from the top cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-31 05:35:54 PM.